
rew generation

QUICK AND EASY INSTALLATION: CLIP - DRILL - TURN - SCREW

Thank you for trusting the new FLEXCLIPTM 2.0 from LAPIERRE. This second generation still benefits from clever ease of installation, along with new attributes that enhance its stability and waterproofing.

- The FLEXCLIP™ 2.0 is suitable for most 1-inch diameter polyethylene and (HD) collector pipes available on the market.
- The sealing material of the FLEX-CLIP[™] 2.0 is made from antibacterial, high-performance, waterproof, and durable silicone.

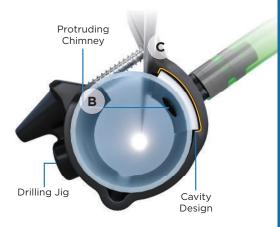

Developed with



INSTALLATION METHOD

- Using a cloth, clean the surface of the mainline where the FLEXClip[™] 2.0 will be located.
- CLIP the FLEXClip[™] 2.0 onto the collector, making sure that the groove (A) used for positioning the drilling template is correctly inserted on 9 gage wire.
- 3. DRILL through the collector wall using the integrated drilling template hole (B) on the FLEXClip™ 2.0. Use a sharp 5/16 steel bit. Drill only through the first layer of the mainline.
- **4.** TURN in the indicated direction so that the protruding chimney (C) fits into the drilled hole of the mainline. The "click" sound indicates the final placement of the FLEXClip™ 2.0.
- SCREW in the provided 1/4 screw until the stopper (D) makes contact with the collector pipe. You will feel resistance, indicating proper tightening. Avoid over-tightening.
- **6.** Insert the lateral line beyond the 2 barbs up to the fitting shoulder.















www.elapierre.com

www.eiapierre.com

WHAT YOU NEED FOR THE INSTALLATION OF FLEXCLIP™ 2.0:

- A drill
- A 5/16 steel bit
- A 1/4 turn screwdriver or socket screwdriver